

Harvia Domo



Solid wood sauna

Instructions for installation

Let's sauna.

Itm.nr.	Size
DOMO-S	166 x 159 x 204 cm
DOMO-M	196 x 159 x 204 cm
DOMO-L	196 x 189 x 204 cm



EN

DE



Table of Contents

1. Preparing for installation	3
1.1. Important note	3
1.2. Tools required	4
1.3. Maintenance and cleaning	5
1.4. Disposal	5
2. Parts list for Domo Small	6
3. Parts list for Domo Medium	8
4. Parts list for Domo Large	10
5. Floor plan for Domo Small	12
5.1. Floor plan Small “left”	12
5.2. Floor plan Small “right”	12
6. Floor plan for Domo Medium	13
6.1. Floor plan Medium “left”	13
6.2. Floor plan Medium “right”	13
7. Floor plan for Domo Large	14
7.1. Floor plan Large “left”	14
7.2. Floor plan Large “right”	14
8. Assembling the cabin	15
8.1. Installing wall elements	15
8.2. Assembling the glass elements	15
8.3. Completing the cabin exterior	15
8.4. Roof installation	16
8.5. Installing interior fittings	16
8.6. Installing the glass door	16
8.7. Installing accessories	16
8.8. Installing the electrical equipment	16
Installation illustrations (after last language)	19
9. Spare parts	17
10. Warranty terms	17

1. Preparing for installation

Read these assembly instructions carefully and keep them within reach when using the sauna so that you can look up product information at any time.



These installation instructions can also be found in the downloads section of our website: www.mediabank.harvia.com.

1.1. Important note

- Before you begin work, check the parts list to ensure that all the individual parts have been delivered. If you discover any missing parts, notify the Harvia support team within 14 days of receiving the sauna cabin.
- Keep the delivery note, the invoice and the assembly instructions in a safe-place in case of any questions.
- The room that the sauna is installed in must be dry and ensure an appropriate amount of air circulation.
- The floor must be level and even, preferably a stone or tiled floor.
- A minimum cabin height of 230 cm is required for the cabin installation work.
- A distance of at least 5 cm from the wall must be maintained.
- The inside of the wooden parts used must not be handled with any impregnating material.
- Wood is a natural product that can swell, shrink or warp, despite good storage. For this reason, some force may be necessary during the installation.
- Air circulation in the sauna cabin is crucial for correct function. Please observe the dimensions for the air intake and outlet vents specified by the manufacturer of the sauna heater. If necessary, cut a rectangular cutout into the base frame before installation; holes can also be made later using a drill.
- You will need good manual skills and an assistant for the installation.
- All screw fittings must be pre-drilled.

EN

Attention!

The electrical connection may only be performed by a qualified electrician or similarly qualified person.

1.2. Tools required

- Hammer with a wooden head or a mallet
- Cordless screwdriver with bits for cross-head screws and Torx
- Roller tape measure
- Drill bits with a diameter of 3 mm, 10 mm, 20 - 30 mm (for sauna heater power cable)
- Spirit level
- 1.5 mm hexagonal socket wrench
- Utility knife
- Ladder



This symbol indicates tips and useful information




Back-to-front assembly



Pre-drill



Carry out wiring

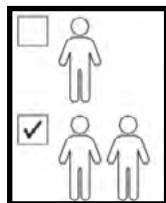


Two persons necessary



Cut to real measurement




Check the right angle:

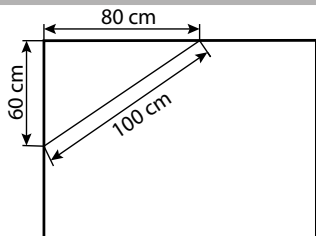



Handle glass with care: Special care must be taken with the edges of the glass – hardened glass can shatter into small pieces in the event of impact. Insert protective cushioning (e.g: cardboard box) under the edge of the glass.

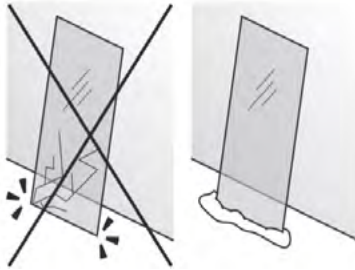

1.3. Maintenance and cleaning

- The sauna should be cleaned inside with a damp cloth. Use warm water only - if required, we recommend Harvia Sauna Cleaner (SAC25040 - Cleaning and disinfection)
- If the sauna will not be used for an extended period, we recommend heating the cabin once a month to prevent the formation of mould.



Pitch pockets are not grounds for return, since they can always appear in spruce wood and the depth at which they lie cannot be detected during the sorting-out process.

If these are just under the surface, heat can cause them to soften and “bleed”.

The leaking pitch can be removed with a rag soaked in acetone. If only droplets of pitch occur, allow these to harden and then carefully scrape them off with a knife.

1.4. Disposal



- Dispose of packaging materials in accordance with the applicable waste disposal regulations.
- Used devices contain reusable materials as well as hazardous substances. Therefore, do not dispose of your used device with household waste, but do so in accordance with the locally applicable regulations.

2. Parts list for Domo Small

No. of items	Name	Dimensions cm
Wall elements		
1	Wall element, bottom right - Electrical element	154.5x102x4
1	Wall element, top right - Electrical element	154.5x108x4
1	Wall element, bottom rear - Ventilation element	154.5x102x4
1	Wall element, top rear	154.5x108x4
1	Wall element, bottom left - Electrical element	154.5x102x4
1	Wall element, top left - Electrical element	154.5x108x4
1	Element above door	142.5x12.1x4
1	Element with groove for glass, right	202.5x6x4
1	Element with groove for glass, left	202.5x6x4
1	Mounting rail above door	59.7x1.8x0.8
2	Cover, front	202.5x11.5x4
1	Cover, top front	142.5x10.6x4
Roof elements		
2	Roof element	146.7x76.8x5.6
Glass elements		
1	Glass door	190x59x0.8
1	Glass element with holes for door hinges	193x58x0.8
1	Glass element	193x27.5x0.8
Support slats		
3	Bench support slats	57x4x4
2	Bench support slats	97x4x4
2	Roof support slats	138.5x4x4
1	Roof support slat	154.5x4x4
1	Roof support slat with LED	154.5x4x4
4	Cover slats, outside corners	202.5x8x1.5
2	Cover slats, outside, top	138.5x8x1.5
1	Cover slat, inside, top	145.5x8x1.5

No. of items	Name	Dimensions cm
Interior fittings		
1	Bench	153.5x57x8
1	Bench	153.5x50x8
1	Bench	74x57x8
1	Bench foot	57x94x6
1	Heater protection grille	39x73x5
2	Heater protection grille	30x43x5
Accessories		
1	Headrest	30x28x7
1	Door handle set spruce wood/wood	
1	LED RGBW - integrated into roof support slat	154.5x2.1x1.7
1	LED technology 40W (white)	LED-PWS-24-40
1	RGBW LED remote control 1zone	LR-1Z
1	Remote RGBW driver CV 1zone	LC-CV-VP
1	Cable cover slat	200x4x3
1	Ventilation slit	52x14x1.5
1	Door magnet, sleeve plate	
2	Door hinges SAZ3309S	
1	Aluminium U-profile	56.7
1	Aluminium U-profile	26.2
1	Installation material set	
1	Assembly instructions	

3. Parts list for Domo Medium

No. of items	Name	Dimensions cm
Wall elements		
1	Wall element, bottom right - Electrical element	154.5x102x4
1	Wall element, top right - Electrical element	154.5x108x4
1	Wall element, bottom rear - Ventilation element	185x102x4
1	Wall element, top rear	185x108x4
1	Wall element, bottom left - Electrical element	154.5x102x4
1	Wall element, top left - Electrical element	154.5x108x4
1	Element above door	173x12.1x4
1	Element with groove for glass, right	202.5x6x4
1	Element with groove for glass, left	202.5x6x4
1	Mounting rail above door	59.7x1.8x0.8
2	Cover, front	202.5x11.5x4
1	Cover, top front	173x10.6x4
Roof elements		
2	Roof element	146.7x92x5.6
Glass elements		
1	Glass door	190x59x0.8
1	Glass element with holes for door hinges	193x58x0.8
1	Glass element	193x58x0.8
Support slats		
3	Bench support slats	57x4x4
2	Bench support slats	88.5x4x4
2	Roof support slats	138.5x4x4
1	Roof support slat	185x4x4
1	Roof support slat with LED	185x4x4
4	Cover slats, outside corners	202.5x8x1.5
2	Cover slats, outside, top	138.5x8x1.5
1	Cover slat, inside, top	145.5x8x1.5

No. of items	Name	Dimensions cm
Interior fittings		
1	Bench	184x57x8
1	Bench	184x50x8
1	Bench	82.5x57x8
1	Bench foot	57x94x6
1	Heater protection grille	52x73x5
2	Heater protection grille	36x43x5
Accessories		
1	Headrest	30x28x7
1	Door handle set spruce wood/wood	
1	LED RGBW - integrated into roof support slat	185x2.1x1.7
1	LED technology 40W (white)	LED-PWS-24-40
1	RGBW LED remote control 1zone	LR-1Z
1	Remote RGBW driver CV 1zone	LC-CV-VP
1	Cable cover slat	200x4x3
1	Ventilation slit	52x14x1.5
1	Door magnet, sleeve plate	
2	Door hinges SAZ3309S	
2	Aluminium U-profile	56.7
1	Installation material set	
1	Assembly instructions	


4. Parts list for Domo Large

No. of Name items	Dimensions cm
Wall elements	
1 Wall element, bottom right - Electrical element	185x102x4
1 Wall element, top right - Electrical element	185x108x4
1 Wall element, bottom rear - Ventilation element	185x102x4
1 Wall element, top rear	185x108x4
1 Wall element, bottom left - Electrical element	185x102x4
1 Wall element, top left - Electrical element	185x108x4
1 Element above door	173x12.1x4
1 Element with groove for glass, right	202.5x6x4
1 Element with groove for glass, left	202.5x6x4
1 Mounting rail above door	59.7x1.8x0.8
2 Cover, front	202.5x11.5x4
1 Cover, top front	173x10.6x4
Roof elements	
2 Roof elements	177.2x92x5.6
Glass elements	
1 Glass door	190x59x0.8
1 Glass element with holes for door hinges	193x58x0.8
1 Glass element	193x58x0.8
Support slats	
3 Bench support slats	57x4x4
2 Bench support slats	114x4x4
2 Roof support slats	169x4x4
1 Roof support slat	185x4x4
1 Roof support slat with LED	185x4x4
4 Cover slats, outside corners	202.5x8x1.5
2 Cover slats, outside, top	169x8x1.5
1 Cover slat, inside, top	176x8x1.5


No. of Name items		Dimensions cm
Interior fittings		
2	Benches	184x57x8
1	Bench	113x57x8
1	Bench foot	57x94x6
1	Heater protection grille	52x73x5
2	Heater protection grille	36x43x5
Accessories		
2	Headrest	30x28x7
1	Door handle set spruce wood/wood	
1	LED RGBW - integrated into roof support slat	185x2.1x1.7
1	LED technology 40W (white)	LED-PWS-24-40
1	RGBW LED remote control 1zone	LR-1Z
1	Remote RGBW driver CV 1zone	LC-CV-VP
1	Cable cover slat	200x4x3
1	Ventilation slit	52x14x1.5
1	Door magnet, sleeve plate	
2	Door hinges SAZ3309S	
2	Aluminium U-profile	56.7
1	Installation material set	
1	Assembly instructions	

5. Floor plan for Domo Small

5.1. Floor plan Small “left”

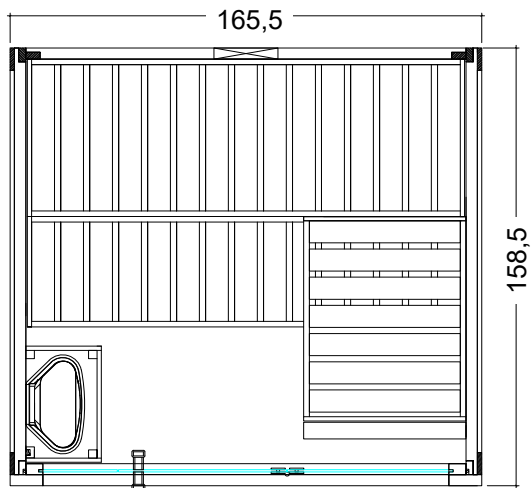


5.2. Floor plan Small “right”

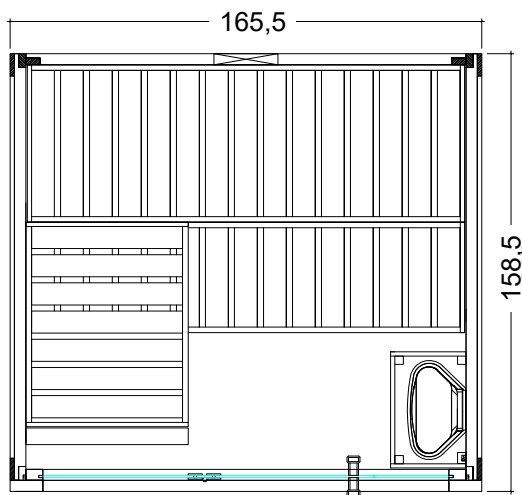


6. Floor plan for Domo Medium

6.1. Floor plan Medium “left”

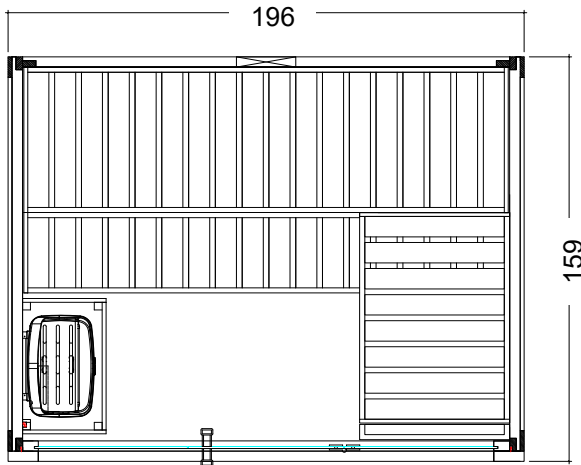


EN

6.2. Floor plan Medium “right”

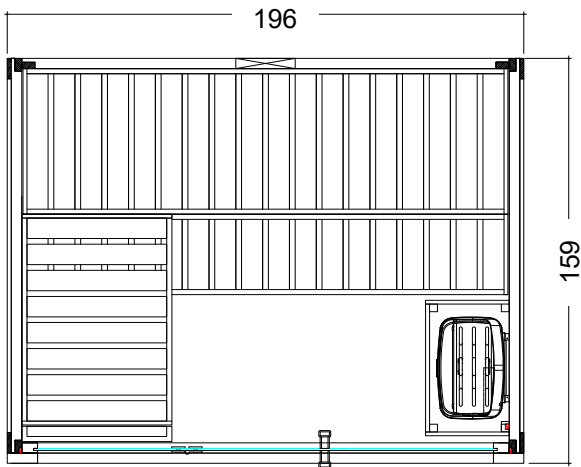


7. Floor plan for Domo Large

7.1. Floor plan Large “left”

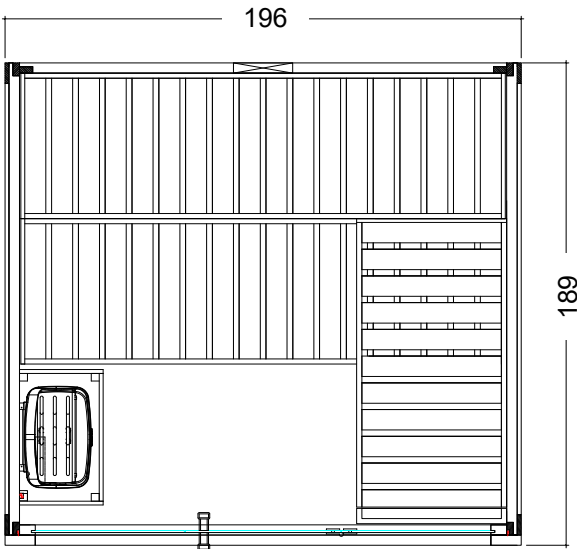

7.2. Floor plan Large “right”

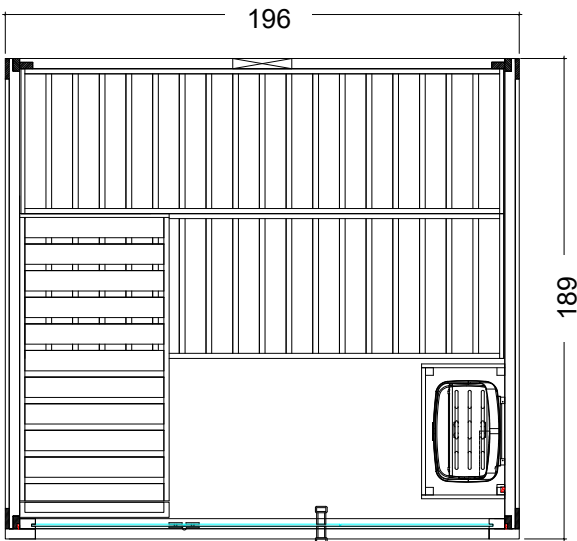

8. Assembling the cabin



ATTENTION!

The cabin is designed for both “right-hand” and “left-hand” assembly. Please observe the floor plans on pages 12 to 14, depending on model. Observe the figures starting on page 19.

8.1. Installing wall elements

Start assembly with the “Wall element, bottom rear - Ventilation element” and the “Element, bottom right”. The lower parts can be identified by the projecting connecting strips. Screw the elements at a right angle (see tip on page 4) from outside. Repeat this with the left side wall. The rear wall is thus installed between the side walls.

When assembling the upper sections, again start with the rear wall (Element, top rear). Make sure this is flush with the connecting strip of the lower rear wall. Screw both sides of the upper rear wall to the projecting strip of the lower rear wall. Screw the upper wall elements together.



Note that each upper wall element must be screwed to the protruding strip of the lower wall element.

EN

8.2. Assembling the glass elements

Screw the “Elements with groove for glass” to the side walls from outside. Fit the “Element above door” and additionally screw in from above.

Fit the aluminium U-profiles flush with the glass elements.



Please note that when you install the “glass element with holes for door hinges”, you are defining the direction in which the door opens (see option 1 and 2).

Position the glass element centrally in the door frame, paying attention to straight alignment and the position of the struts. Slide the glass element to the left or right, respectively, into the groove in the corner posts.

Insert the “Mounting rail above door” between the glass elements.

8.3. Completing the cabin exterior

Install the “Covers, front” by screwing from the inside - flush with the inner side.



If using a 2-part sauna control unit, you may need to mount the control unit and lay the data cable.

Install the "Cover, top front" above the glass by screwing from the inside.

Mount the "Cover slats, outside" using screws.

8.4. Roof installation

Install the roof support slats. Start with the strip of LEDs on the rear wall.

Insert the roof elements and screw them to the cabin walls. Observe the cable outlets.

Install the cover slat, inside.

8.5. Installing interior fittings

Mount the ventilation slide.

Install the bench support slats.

Place the upper and lower benches on the bench support slats provided for this purpose.

Screw the bench foot to the upper angled bench and screw the other end of this to the rear upper bench. Finally, screw the bench foot to the wall element.

8.6. Installing the glass door

Screw the two door fittings onto the glass element, making sure that they are straight and that the doors open outward.



The alignment of the fittings is achieved by adjusting / rotating both plastic inserts.

8.7. Installing accessories

The door handles are screwed together from the inside.

Fit the door magnet and sleeve plate. There are mounting holes under the seal for the door magnet; the seal needs to be cut at the left or right depending on how the door opens.

Assemble the protection grille.

Install the cable cover slat as required.

8.8. Installing the electrical equipment



Observe the operating instructions for your sauna heater and sauna control unit.

You need a hole measuring Ø 2 cm in the cable shaft for the heater supply cable. Drill the cable outlet at a right angle and route the cable as far as the roof to the power unit for the sauna control (5 x 2.5 mm²).

Repeat for the heater sensor - Ø 1 cm - 15 cm below the ceiling.

To cover the cables, use the cable cover slat. Shorten them with a saw as required.

Route the data cable for the control panel to the power unit for the sauna power unit.

9. Spare parts

spareparts.harvia.com



10. Warranty terms

www.harvia.com



Harvia Domo

HARVIA

Sauna & Spa

Massivsauna

Montageanleitung

Let's sauna.

Art.-Nr.	Größe
DOMO-S	166 x 159 x 204 cm
DOMO-M	196 x 159 x 204 cm
DOMO-L	196 x 189 x 204 cm



DE



Inhaltsverzeichnis

1. Montage Vorbereitung	3
1.1. Wichtige Hinweise	3
1.2. Benötigtes Werkzeug	4
1.3. Wartung und Reinigung	5
1.4. Entsorgung	5
2. Stückliste Domo Small	6
3. Stückliste Domo Medium	8
4. Stückliste Domo Large	10
5. Grundriss Domo Small	12
5.1. Grundriss „Small links“	12
5.2. Grundriss „Small rechts“	12
6. Grundriss Domo Medium	13
6.1. Grundriss „Medium links“	13
6.2. Grundriss „Medium rechts“	13
7. Grundriss Domo Large	14
7.1. Grundriss „Large links“	14
7.2. Grundriss „Large rechts“	14
8. Montage Kabine	15
8.1. Montage Wandelemente	15
8.2. Montage Glaselemente	15
8.3. Fertigstellung Kabine außen	16
8.4. Montage Dach	16
8.5. Montage Inneneinrichtung	16
8.6. Montage Glastür	16
8.7. Montage Zubehör	16
8.8. Montage Elektrogeräte	17
Abbildungen Montage (nach der letzten Sprache)	19
9. Ersatzteile	17
10. Garantiebedingungen	17

1. Montage Vorbereitung

Lesen Sie diese Montageanleitung gut durch und bewahren Sie sie in der Nähe der Sauna auf. So können Sie jederzeit Produktinformationen nachlesen.



Sie finden diese Montageanleitung auch im Downloadbereich unserer Webseite auf www.mediabank.harvia.com.

1.1. Wichtige Hinweise

- Kontrollieren Sie, bevor Sie mit der Arbeit beginnen, anhand der Stückliste, ob alle Einzelteile auch tatsächlich mitgeliefert wurden. Sollten Einzelteile ausnahmsweise fehlen, benachrichtigen Sie Harvia Support bis spätestens 14 Tage nach Erhalt der Kabine.
- Bewahren Sie den Lieferschein, die Rechnung und die Montageanleitung für eventuelle Rückfragen gut auf.
- Der Raum, in dem die Saunakabine montiert wird, muss trocken sein und eine entsprechende Luftzirkulation gewährleisten.
- Der Fußboden muss waagrecht und eben sein, bevorzugt Stein- oder Fliesenboden.
- Für die Montagearbeiten der Kabine wird eine Mindestraumhöhe von 230 cm benötigt.
- Es muss ein Wandabstand von mindestens 5 cm eingehalten werden.
- Die Innen zu verwendenden Holzteile dürfen nicht mit Imprägniermittel behandelt werden.
- Holz ist ein Naturprodukt, das trotz guter Lagerung aufquellen, schwinden oder sich verziehen kann. Aus diesem Grund kann es vorkommen, dass bei der Montage etwas Kraft aufgebracht werden muss.
- Die Luftzirkulation in der Saunakabine ist entscheidend für die Funktionalität. Beachten Sie die Abmessungen der Zu- und Abluftöffnungen der Herstellerangaben des Saunaofens. Schneiden Sie ggf. vor der Montage einen rechteckigen Ausschnitt in den Bodenrahmen; Löcher mittels Bohrer sind auch nachträglich möglich.
- Für die Montage benötigen Sie handwerkliche Begabung und einen Helfer.
- Alle Verschraubungen müssen vorgebohrt werden.

Achtung!

Der Elektroanschluss darf nur durch eine Elektrofachkraft oder eine vergleichsweise qualifizierte Person ausgeführt werden.

1.2. Benötigtes Werkzeug

- Hammer und Beilageholz oder einen Gummihammer
- Akkuschauber mit Bits für Kreuzschrauben und Torx
- Rollmaßband
- Bohrer mit Durchmesser 3 mm, 10 mm, 20 - 30 mm (für Stromkabel Saunaofen)
- Wasserwaage
- Innensechskant-Schlüssel 1,5 mm
- Universalmesser
- Leiter



Dieses Symbol kennzeichnet Tipps und nützliche Hinweise




Back-to-front assembly



Vorbohren



Verkabelung vornehmen

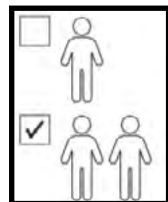


Zwei Personen erforderlich



Ablängen auf Naturmaß




Überprüfung des rechten Winkels:

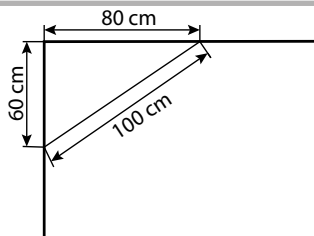



Vorsichtiger Umgang mit Glas: Besondere Vorsicht gilt den Glaskanten - Gehärtetes Glas kann bei Stößen in kleine Scherben zerspringen. Legen Sie ein Schutzpolster (z.Bsp.: Verpackungs-Karton) unter die Glaskante.

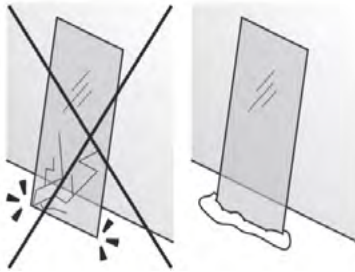

1.3. Wartung und Reinigung

- Die Sauna sollte mit einem feuchten Tuch gereinigt werden. Verwenden Sie nur warmes Wasser - bei Bedarf empfehlen wir den Harvia Sauna Cleaner (SAC25040 - Reinigung und Desinfektion)
- Wird die Sauna längere Zeit nicht benutzt, empfehlen wir, die Kabine einmal im Monat aufzuheizen, um Schimmelbildung vorzubeugen.

DE



Harzgallen sind kein Reklamationsgrund. Da in Fichtenholz immer wieder Harzgallen vorkommen und man beim Aussortieren nicht erkennen kann in welcher Tiefe diese sich befinden.

Wenn diese knapp unter der Oberfläche sind brechen sie bei Hitzeentwicklung auf und „bluten“ aus.

Das ausgelaufene Harz kann man mit einem Aceton gedrängtem Lappen entfernen. Wenn lediglich Harztropfen entstehen, lassen Sie diese aushärten und schaben sie anschließend mit einem Messer vorsichtig ab.

1.4. Entsorgung



- Entsorgen Sie die Verpackungsmaterialien nach den gültigen Entsorgungsrichtlinien.
- Altgeräte enthalten wiederverwendbare Materialien, aber auch schädliche Stoffe. Geben Sie Ihr Altgerät deshalb auf keinen Fall in den Restmüll, sondern entsorgen Sie das Gerät nach den örtlich geltenden Vorschriften.

2. Stückliste Domo Small

Az	Bezeichnung	Dimensionen cm
Wandelemente		
1	Wandelement rechts unten - Elektroelement	154,5x102x4
1	Wandelement rechts oben - Elektroelement	154,5x108x4
1	Wandelement hinten unten - Lüftungselement	154,5x102x4
1	Wandelement hinten oben	154,5x108x4
1	Wandelement links unten - Elektroelement	154,5x102x4
1	Wandelement links oben - Elektroelement	154,5x108x4
1	Element oberhalb Tür	142,5x12,1x4
1	Element mit Nut für Glas rechts	202,5x6x4
1	Element mit Nut für Glas links	202,5x6x4
1	Element oberhalb Tür	59,7x1,8x0,8
2	Abdeckung vorne	202,5x11,5x4
1	Abdeckung vorne oben	142,5x10,6x4
Dachelemente		
2	Dachelemente	146,7x76,8x5,6
Glaselemente		
1	Glastür	190x59x0,8
1	Glaselement mit Bohrungen für Türbänder	193x58x0,8
1	Glaselement	193x27,5x0,8
Auflageleisten		
3	Bankauflageleisten	57x4x4
2	Bankauflageleisten	97x4x4
2	Dachauflageleisten	138,5x4x4
1	Dachauflageleiste	154,5x4x4
1	Dachauflageleiste mit LED	154,5x4x4
4	Abdeckleisten aussen Ecken	202,5x8x1,5
2	Abdeckleisten aussen oben	138,5x8x1,5
1	Abdeckleiste innen oben	145,5x8x1,5

Az	Bezeichnung	Dimensionen cm
Inneneinrichtung		
1	Bank	153,5x57x8
1	Bank	153,5x50x8
1	Bank	74x57x8
1	Bankfuß	57x94x6
1	Ofenschutzgitter	39x73x5
2	Ofenschutzgitter	30x43x5
Zubehör		
1	Kopfstütze	30x28x7
1	Türgriff Set Fichte Holz/Holz	
1	LED RGBW - eingebaut in Dachauflageleiste	154,5x2,1x1,7
1	LED Technik 40W (weiß)	LED-PWS-24-40
1	RGBW LED Fernbedienung 1Zone	LR-1Z
1	Funk RGBW Treiber CV 1Zone	LC-CV-VP
1	Kabelabdeckleiste	200x4x3
1	Lüftungsschieber	52x14x1,5
1	Türmagnet, Überschubblech	
2	Türbänder SAZ3309S	
1	U-Alu Profil	56,7
1	U-Alu Profil	26,2
1	Montagematerialset	
1	Montageanleitung	

3. Stückliste Domo Medium

Az	Bezeichnung	Dimensionen cm
Wandelemente		
1	Wandelement rechts unten - Elektroelement	154,5x102x4
1	Wandelement rechts oben - Elektroelement	154,5x108x4
1	Wandelement hinten unten - Lüftungselement	185x102x4
1	Wandelement hinten oben	185x108x4
1	Wandelement links unten - Elektroelement	154,5x102x4
1	Wandelement links oben - Elektroelement	154,5x108x4
1	Element oberhalb Tür	173x12,1x4
1	Element mit Nut für Glas rechts	202,5x6x4
1	Element mit Nut für Glas links	202,5x6x4
1	Element oberhalb Tür	59,7x1,8x0,8
2	Abdeckung vorne	202,5x11,5x4
1	Abdeckung vorne oben	173x10,6x4
Dachelemente		
2	Dachelemente	146,7x92x5,6
Glaselemente		
1	Glastür	190x59x0,8
1	Glaselement mit Bohrungen für Türbänder	193x58x0,8
1	Glaselement	193x58x0,8
Auflageleisten		
3	Bankauflageleisten	57x4x4
2	Bankauflageleisten	88,5x4x4
2	Dachauflageleisten	138,5x4x4
1	Dachauflageleiste	185x4x4
1	Dachauflageleiste mit LED	185x4x4
4	Abdeckleisten aussen Ecken	202,5x8x1,5
2	Abdeckleisten aussen oben	138,5x8x1,5
1	Abdeckleiste innen oben	145,5x8x1,5

Az	Bezeichnung	Dimensionen cm
Inneneinrichtung		
1	Bank	184x57x8
1	Bank	184x50x8
1	Bank	82,5x57x8
1	Bankfuß	57x94x6
1	Ofenschutzgitter	52x73x5
2	Ofenschutzgitter	36x43x5
Zubehör		
1	Kopfstütze	30x28x7
1	Türgriff Set Fichte Holz/Holz	
1	LED RGBW - eingebaut in Dachauflageleiste	185x2,1x1,7
1	LED Technik 40W (weiß)	LED-PWS-24-40
1	RGBW LED Fernbedienung 1Zone	LR-1Z
1	Funk RGBW Treiber CV 1Zone	LC-CV-VP
1	Kabelabdeckleiste	200x4x3
1	Lüftungsschieber	52x14x1,5
1	Türmagnet, Überschubblech	
2	Türbänder SAZ3309S	
2	U-Alu Profil	56,7
1	Montagematerialset	
1	Montageanleitung	


4. Stückliste Domo Large

Az	Bezeichnung	Dimensionen cm
Wandelemente		
1	Wandelement rechts unten - Elektroelement	185x102x4
1	Wandelement rechts oben - Elektroelement	185x108x4
1	Wandelement hinten unten - Lüftungselement	185x102x4
1	Wandelement hinten oben	185x108x4
1	Wandelement links unten - Elektroelement	185x102x4
1	Wandelement links oben - Elektroelement	185x108x4
1	Element oberhalb Tür	173x12,1x4
1	Element mit Nut für Glas rechts	202,5x6x4
1	Element mit Nut für Glas links	202,5x6x4
1	Element oberhalb Tür	59,7x1,8x0,8
2	Abdeckung vorne	202,5x11,5x4
1	Abdeckung vorne oben	173x10,6x4
Dachelemente		
2	Dachelemente	177,2x92x5,6
Glaselemente		
1	Glastür	190x59x0,8
1	Glaselement mit Bohrungen für Türbänder	193x58x0,8
1	Glaselement	193x58x0,8
Auflageleisten		
3	Bankauflageleisten	57x4x4
2	Bankauflageleisten	114x4x4
2	Dachauflageleisten	169x4x4
1	Dachauflageleiste	185x4x4
1	Dachauflageleiste mit LED	185x4x4
4	Abdeckleisten aussen Ecken	202,5x8x1,5
2	Abdeckleisten aussen oben	169x8x1,5
1	Abdeckleiste innen oben	176x8x1,5


Az	Bezeichnung	Dimensionen cm
Inneneinrichtung		
2	Bänke	184x57x8
1	Bank	113x57x8
1	Bankfuß	57x94x6
1	Ofenschutzgitter	52x73x5
2	Ofenschutzgitter	36x43x5
Zubehör		
2	Kopfstütze	30x28x7
1	Türgriff Set Fichte Holz/Holz	
1	LED RGBW - eingebaut in Dachauflageleiste	185x2,1x1,7
1	LED Technik 40W (weiß)	LED-PWS-24-40
1	RGBW LED Fernbedienung 1Zone	LR-1Z
1	Funk RGBW Treiber CV 1Zone	LC-CV-VP
1	Kabelabdeckleiste	200x4x3
1	Lüftungsschieber	52x14x1,5
1	Türmagnet, Überschubblech	
2	Türbänder SAZ3309S	
2	U-Alu Profil	56,7
1	Montagematerialset	
1	Montageanleitung	

5. Grundriss Domo Small

5.1. Grundriss „Small links“

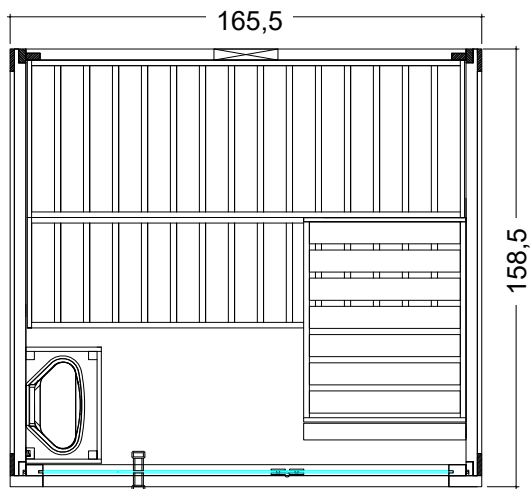


5.2. Grundriss „Small rechts“

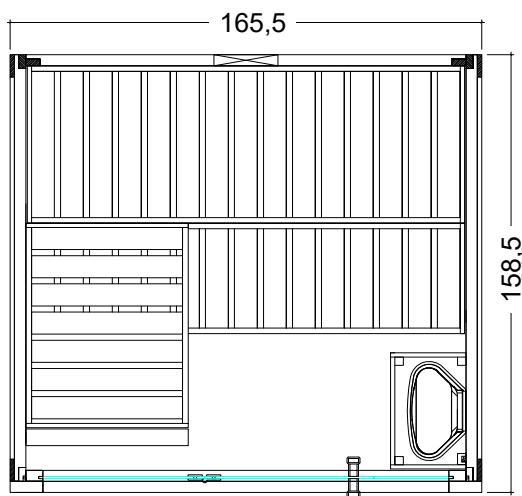


6. Grundriss Domo Medium

6.1. Grundriss „Medium links“

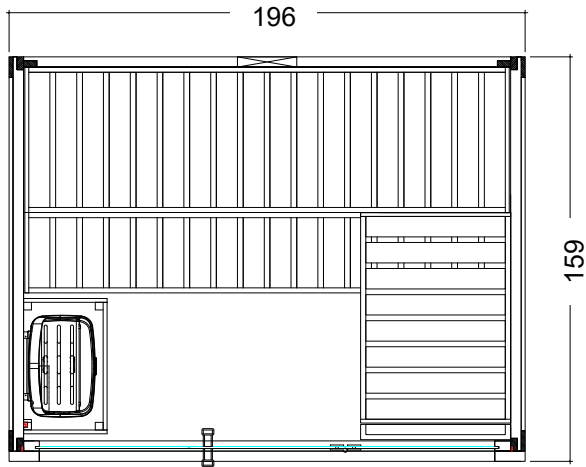


DE

6.2. Grundriss „Medium rechts“

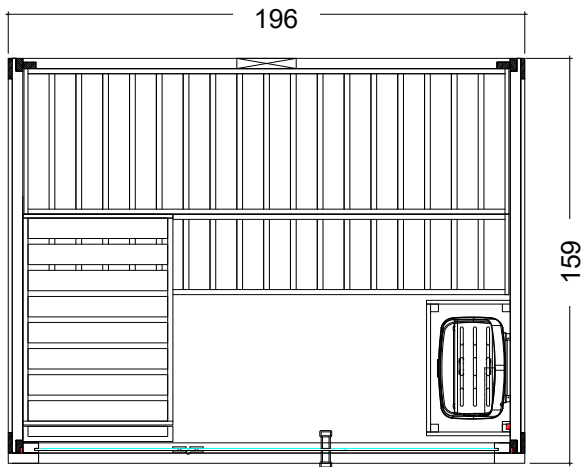


7. Grundriss Domo Large

7.1. Grundriss „Large links“

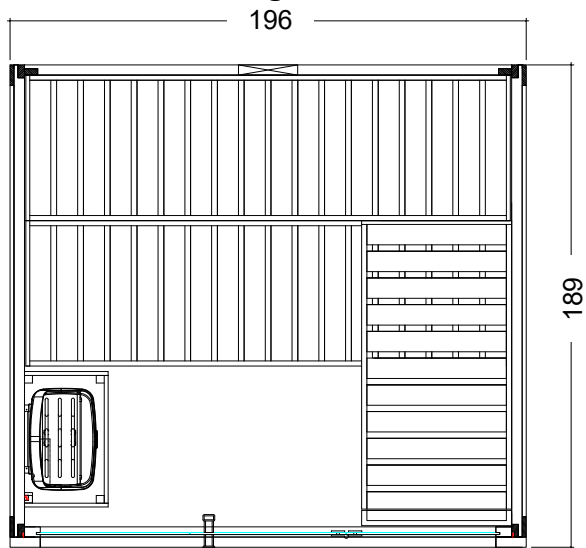

7.2. Grundriss „Large rechts“

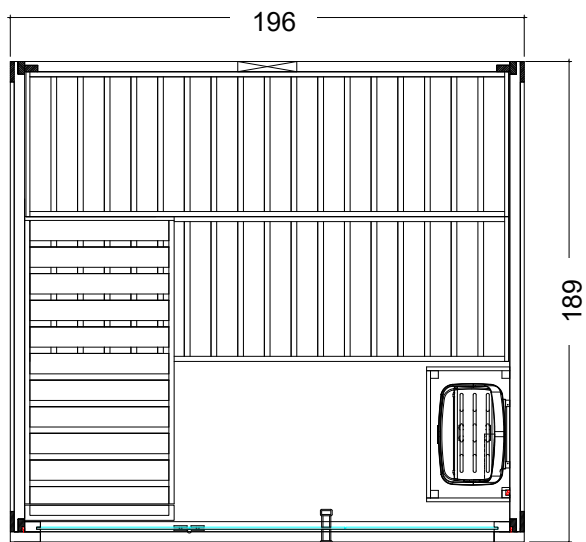

8. Montage Kabine



ACHTUNG!

Die Kabine kann „links“ oder „rechts“ aufgebaut werden, beachten Sie dazu die Grundrisspläne auf den Seiten 12 bis 14, je nach Modell. Beachten Sie die Abbildungen ab Seite 19.

8.1. Montage Wandelemente

Beginnen Sie die Montage mit dem „Wandelement hinten unten - Lüftungselement“ und dem „Element rechts unten“. Die Unterteile sind durch die überstehenden Verbindungsleisten erkennbar. Verschrauben Sie die Elemente im rechten Winkel (siehe Tipp auf Seite 4) von außen. Wiederholen Sie dies mit der linken Seitenwand. Die Rückwand ist somit zwischen den Seitenwänden montiert.

Bei der Montage der Oberteile beginnen Sie wieder mit der Rückwand (Element hinten oben). Achten Sie auf den bündigen Abschluss mit der Verbindungsleiste der unteren Rückwand. Verschrauben Sie die obere Rückwand beidseitig mit der überstehenden Leiste der unteren Rückwand.

Verschrauben Sie die oberen Wandelemente miteinander.



Beachten Sie, dass das obere Wandelement jeweils mit der überstehenden Leiste des unteren Wandelements verschraubt sein muss.

DE

8.2. Montage Glaselemente

Verschrauben Sie die „Elemente mit Nut für Glas“ von außen mit den Seitenwänden. Montieren Sie das „Element oberhalb Tür“ und verschrauben es zusätzlich von oben.



Beachten Sie, dass Sie mit dem Einbau des „Glaselement mit Bohrungen für Türbänder“ die Richtung der Türöffnung festlegen (siehe Option 1 und 2).

Stecken Sie die Alu U-Profile bündig auf die Glaselemente.

Stellen Sie das Glaselement mittig in den Türrahmen, achten Sie auf eine gerade Ausrichtung und die Position der Stempel. Schieben Sie die Glaselemente links bzw. rechts in die Nut der Ecksteher.

Montage der „Montageleiste oberhalb Tür“ zwischen den Glaselementen.

8.3. Fertigstellung Kabine außen

Montage der „Abdeckungen vorne“ durch verschrauben von innen - bündig mit der Innenseite.



Bei Verwendung einer 2-teiligen Saunasteuerung ggf. die Montage des Bedienteiles und die Verlegung des Datenkabels vornehmen.

Montage der „Abdeckung vorne oben“ über dem Glas durch verschrauben von innen.

Montage der „Abdeckleisten aussen“ durch verschrauben.

8.4. Montage Dach

Montage der Dachauflageleisten. Beginnen Sie mit der Leiste mit LED an der Rückwand.

Legen Sie die Dachelemente ein und verschrauben diese mit den Kabinenwänden. Beachten Sie die Kabelauslässe.

Montage der Abdeckleiste innen.

8.5. Montage Inneneinrichtung

Montage Lüftungsschieber.

Montage Bankauflageleisten.

Legen Sie die obere und untere Bank auf die dafür vorgesehenen Bankauflageleisten.

Verschrauben Sie den Bankfuß mit der oberen Winkelbank und verschrauben Sie diese auf der anderen Seite mit der hinteren oberen Bank. Zuletzt verschrauben Sie den Bankfuß mit dem Wandelement.

8.6. Montage Glastür

Schrauben Sie die beiden Türbeschläge am Fix-Glaselement fest, achten sie dabei auf die gerade Ausrichtung der Beschläge und darauf, dass die Öffnung der Türe nach außen erfolgt.



Die Ausrichtung der Beschläge wird durch die Justierung / Drehung der beiden Kunststoffeinlagen vorgenommen.

8.7. Montage Zubehör

Die Türgriffe werden von innen miteinander verschraubt.

Montage von Türmagnet und Überschubblech. Für den Türmagnet sind unter der Dichtung Montagebohrungen vorhanden, je nach Türöffnung muss die Dichtung ausgeschnitten werden.

Montage Ofenschutzgitter.

8.8. Montage Elektrogeräte



Beachten Sie die Montageanleitungen Ihres Saunaofens und der Saunasteuerung.

Für die Ofenzuleitung benötigen Sie ein Ø 2 cm großes Loch in den Kabelschacht. Bohren Sie im rechten Winkel den Kabelauslass und verlegen Sie das Kabel bis zur Saunasteuerung (5 x 2,5 mm²).

Wiederholen Sie dies für den Ofenfühler - Ø 1 cm - 15 cm unter der Decke.

Zum Verdecken der Kabel verwenden Sie die Kabelabdeckleiste. Kürzen Sie diese bei Bedarf mit einer Säge.

Verlegen Sie das Datenkabel für das Bedienteil bis zum Leistungsteil der Saunasteuerung.

9. Ersatzteile

spareparts.harvia.com





DE

10. Garantiebedingungen


www.harvia.com




Domo Small

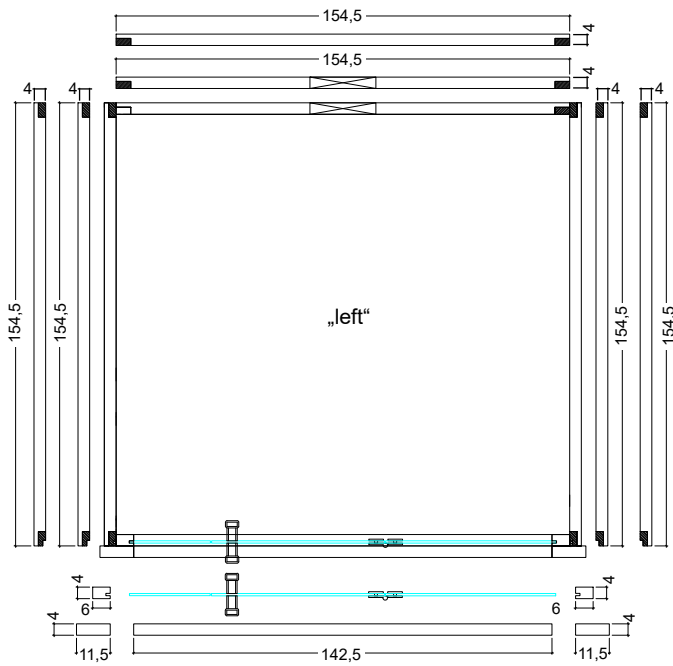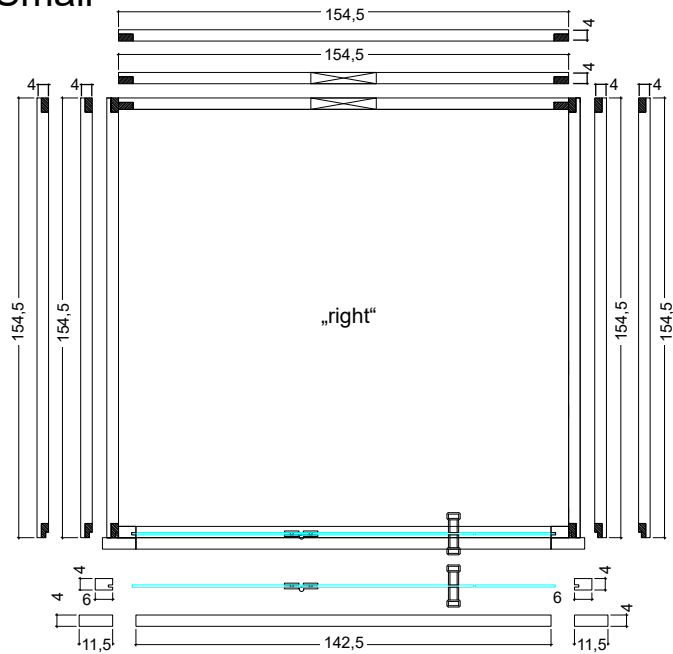



Domo Medium


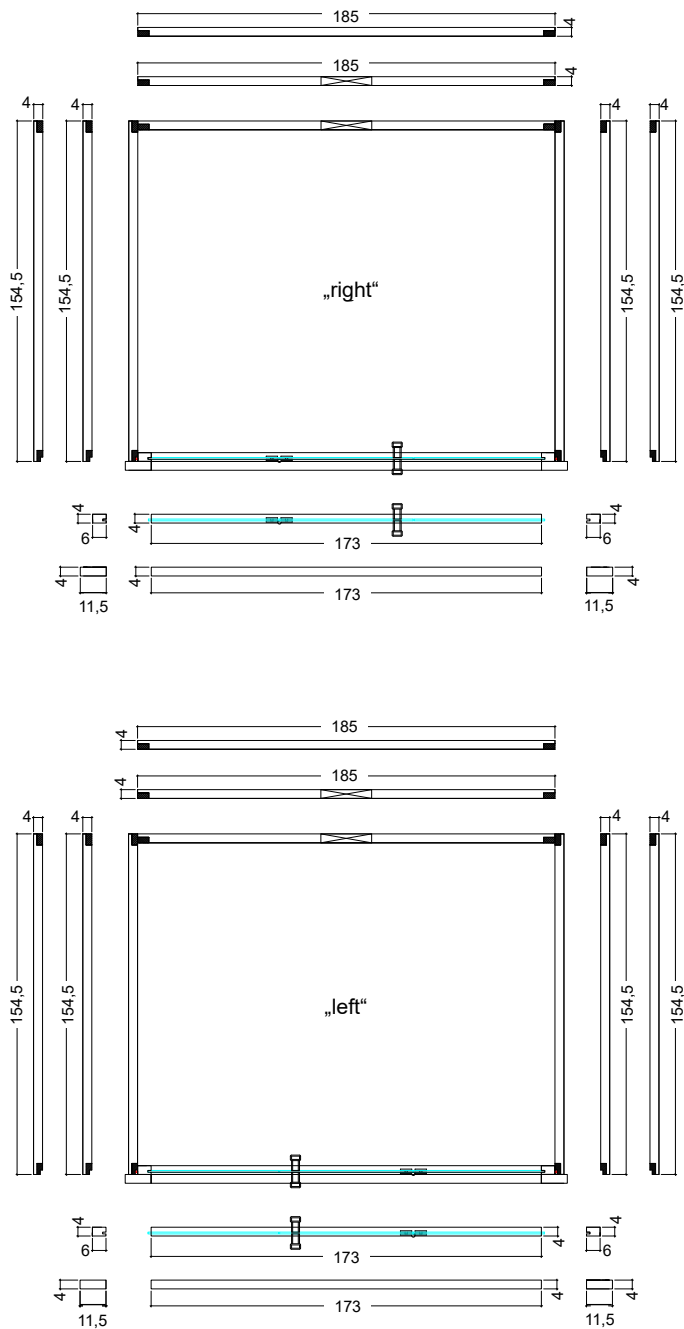



Domo Large

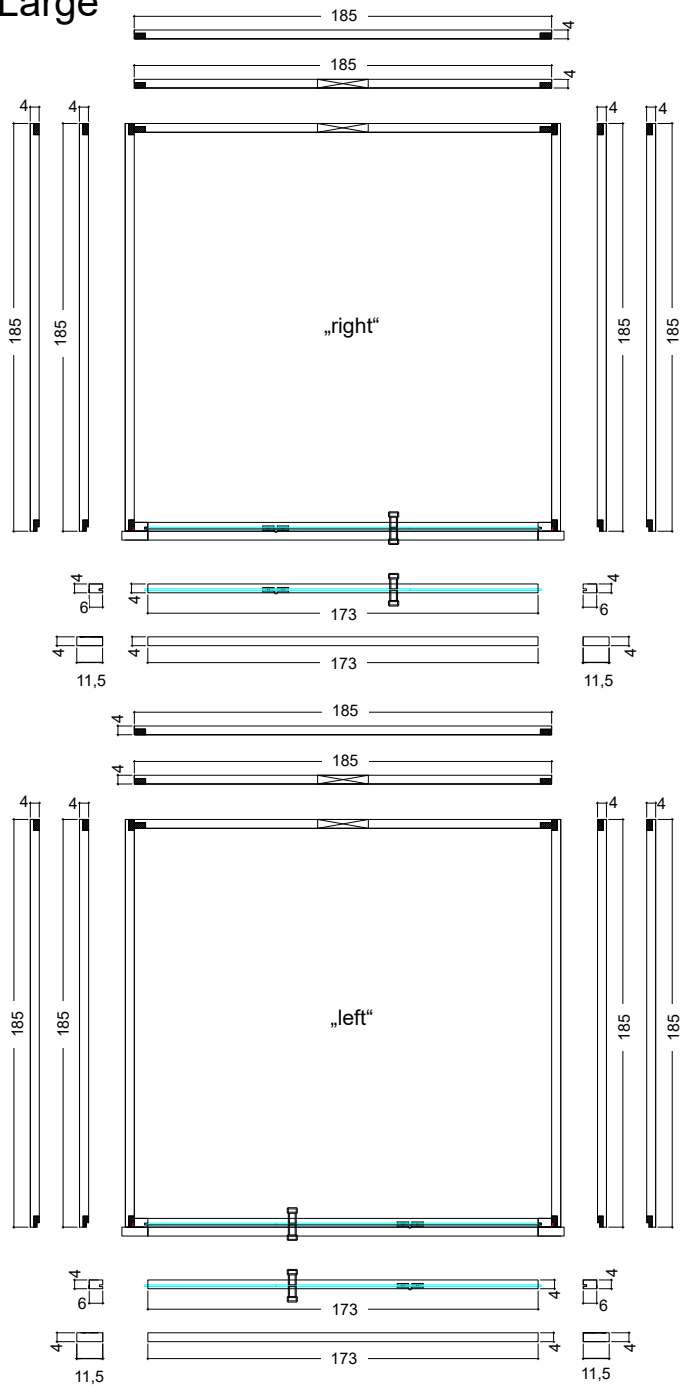


8.1.

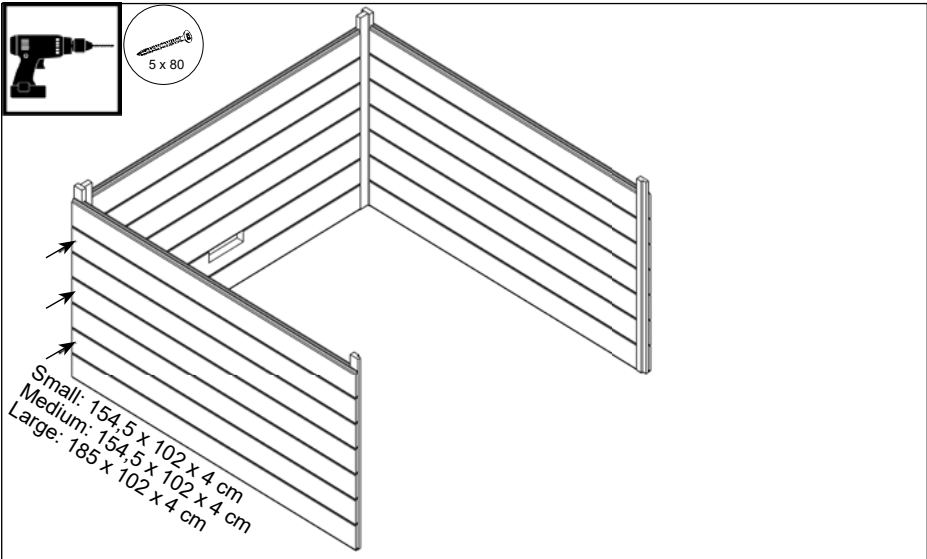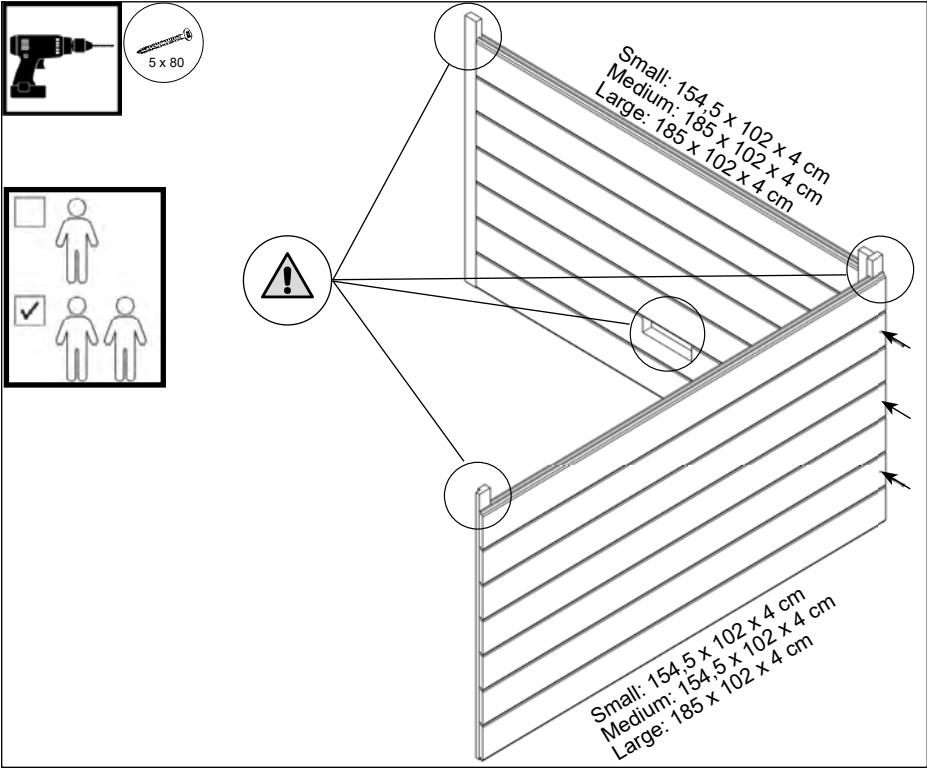


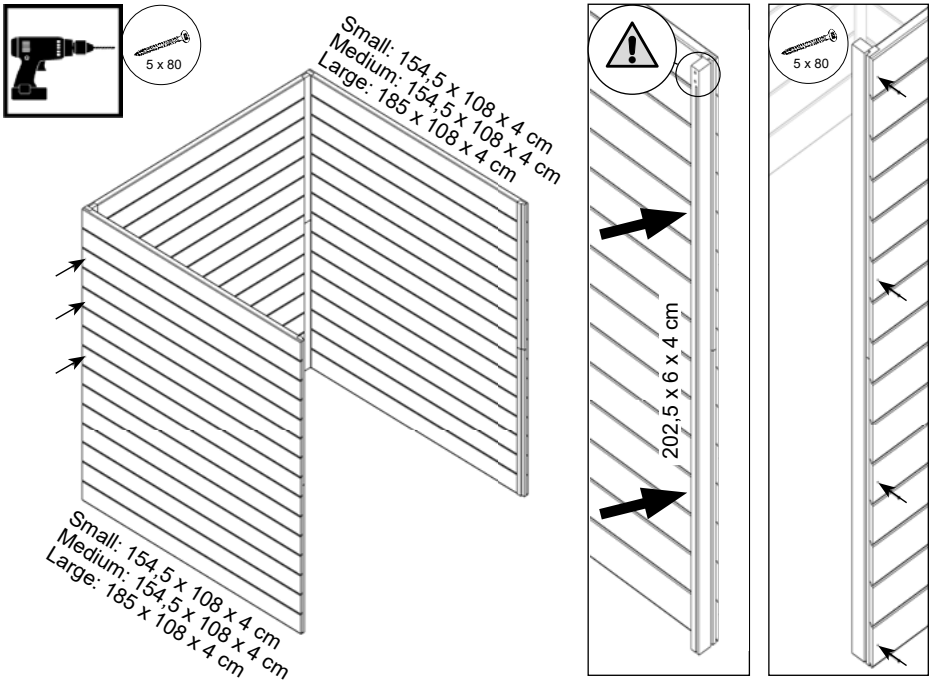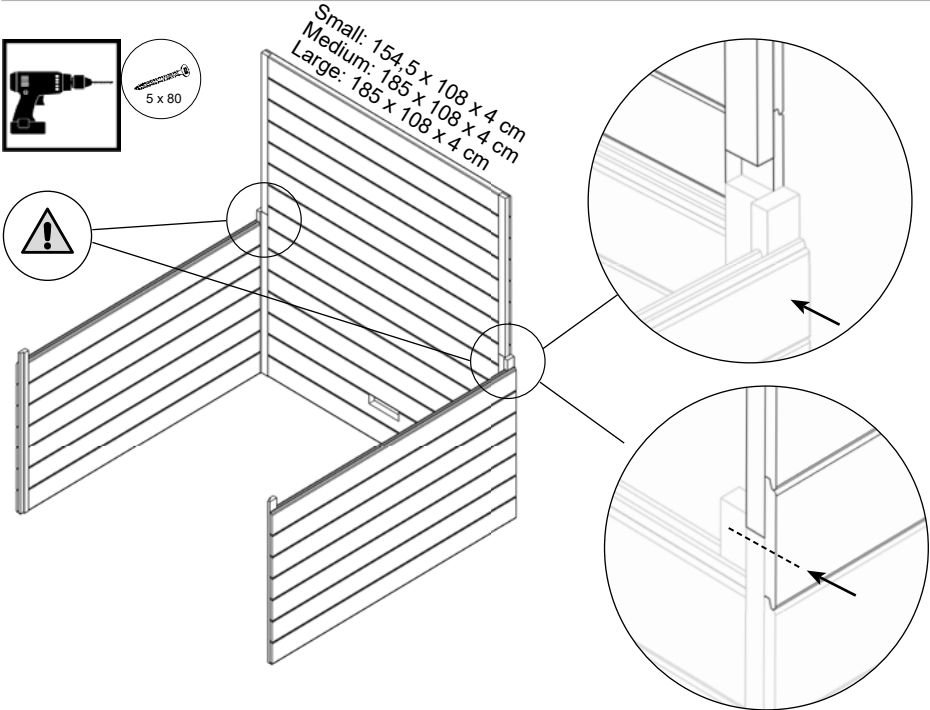




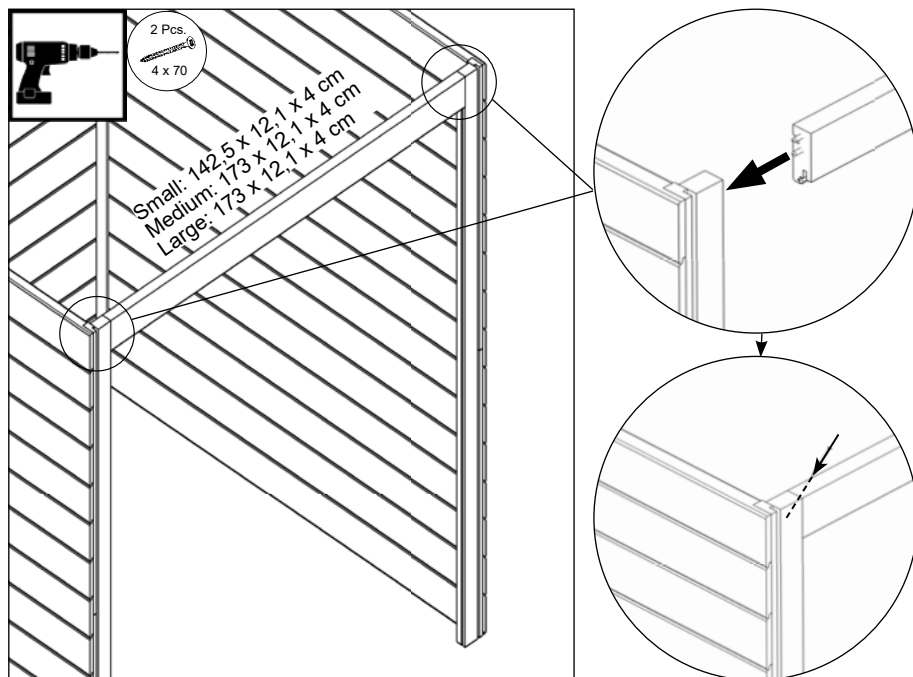


8.2.


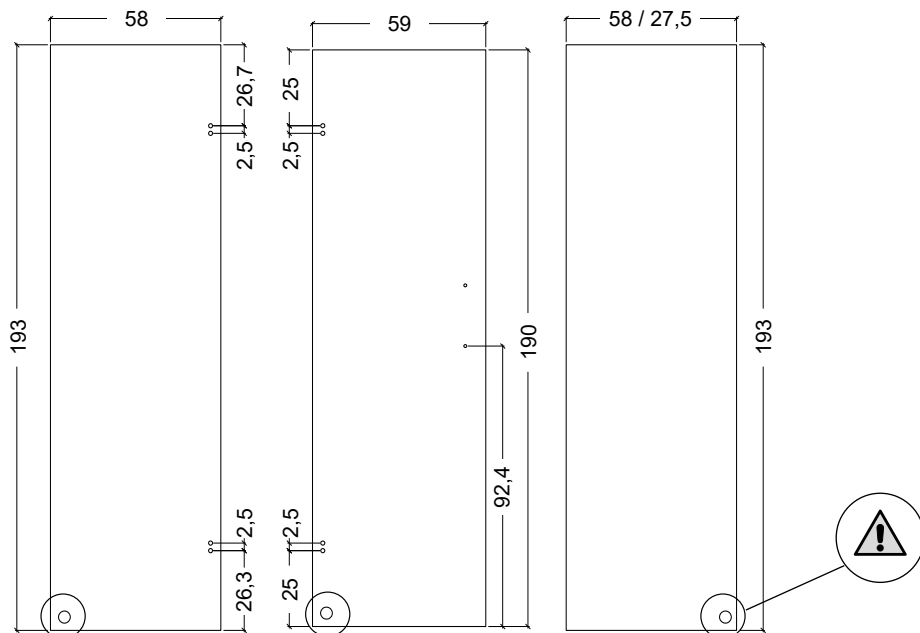


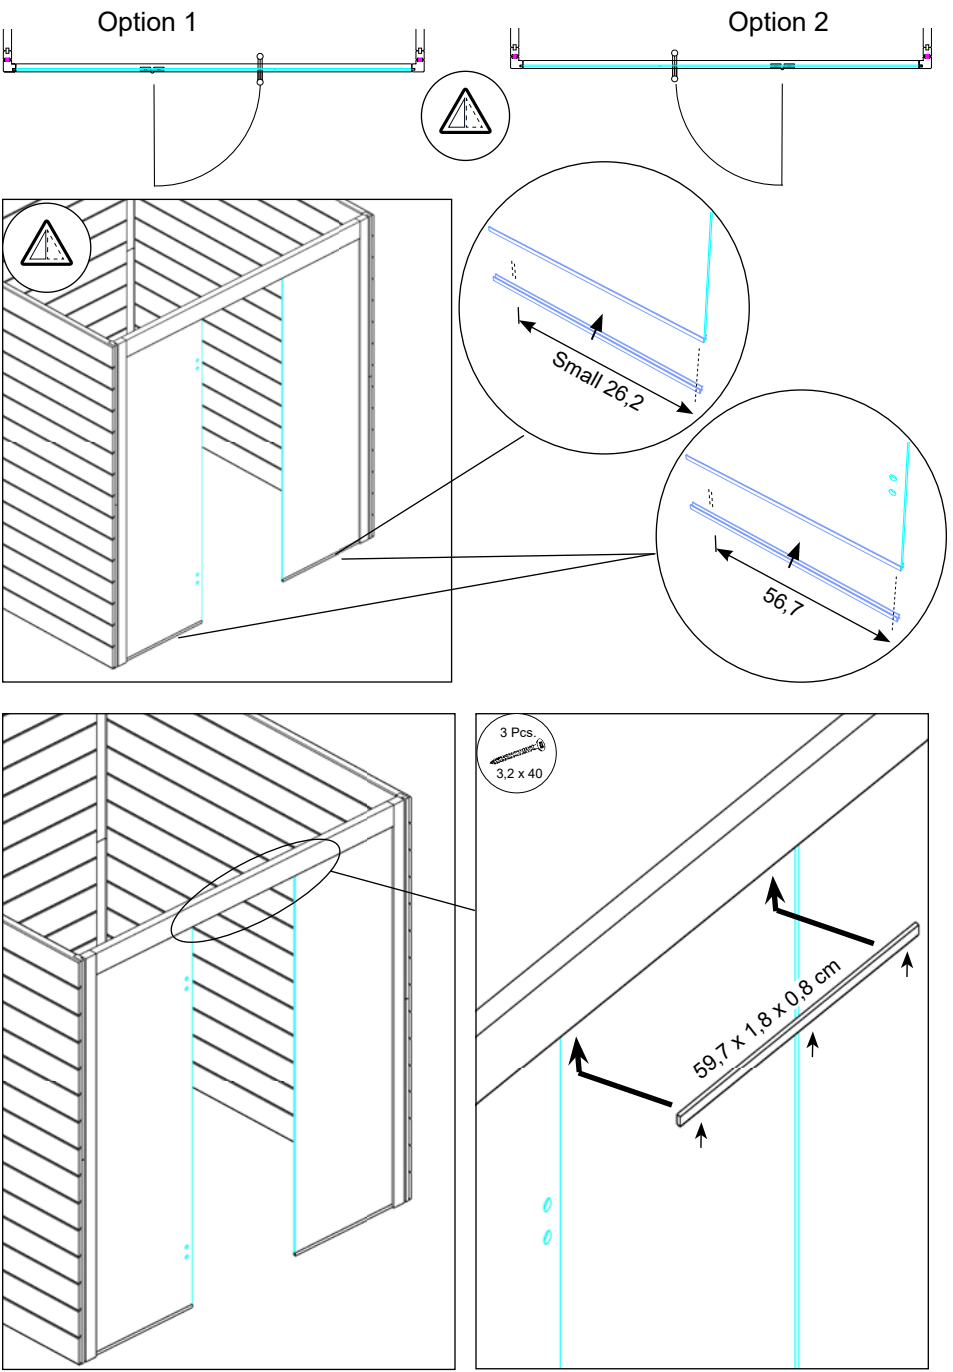


8.3.

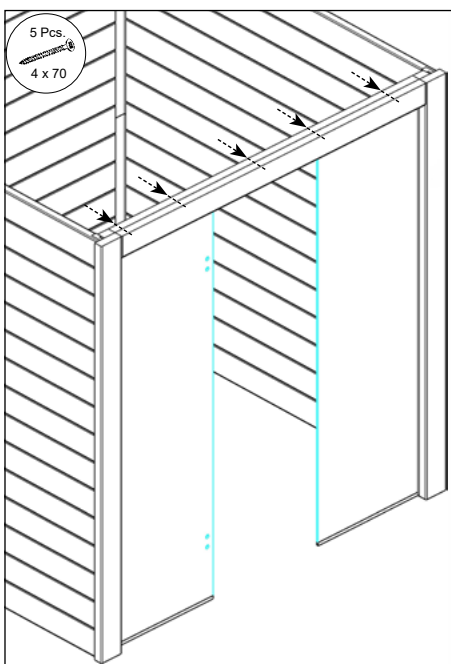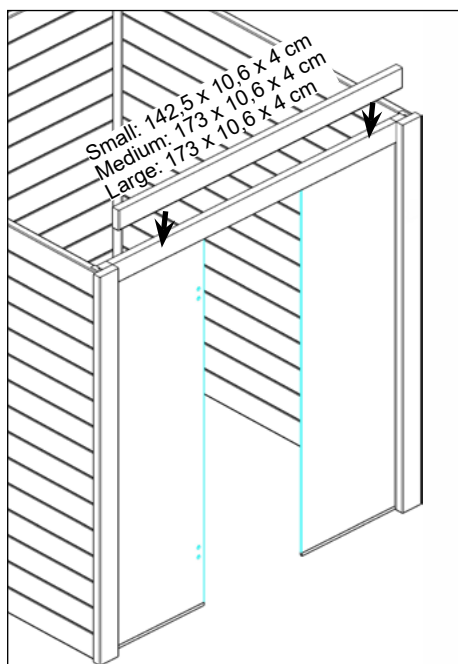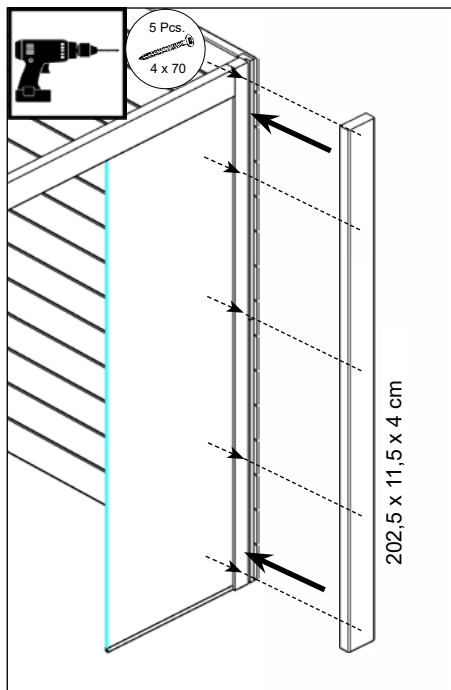
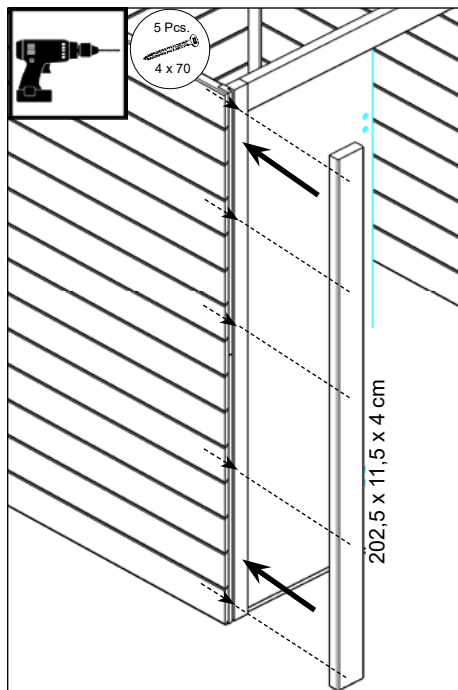



8.4.

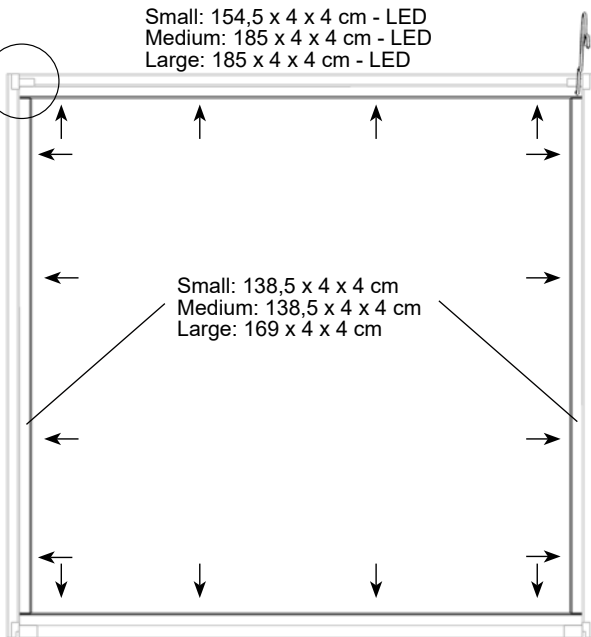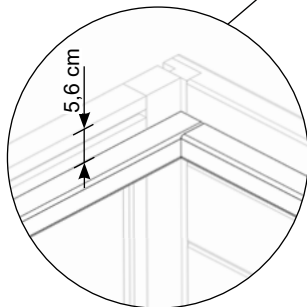


Small: 154,5 x 4 x 4 cm
Medium: 185 x 4 x 4 cm
Large: 185 x 4 x 4 cm






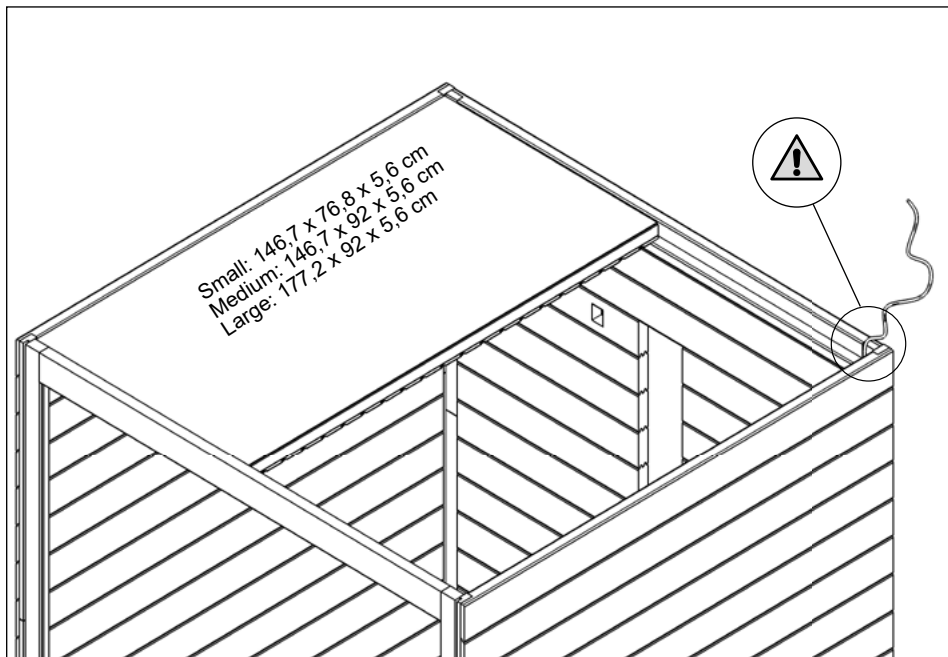


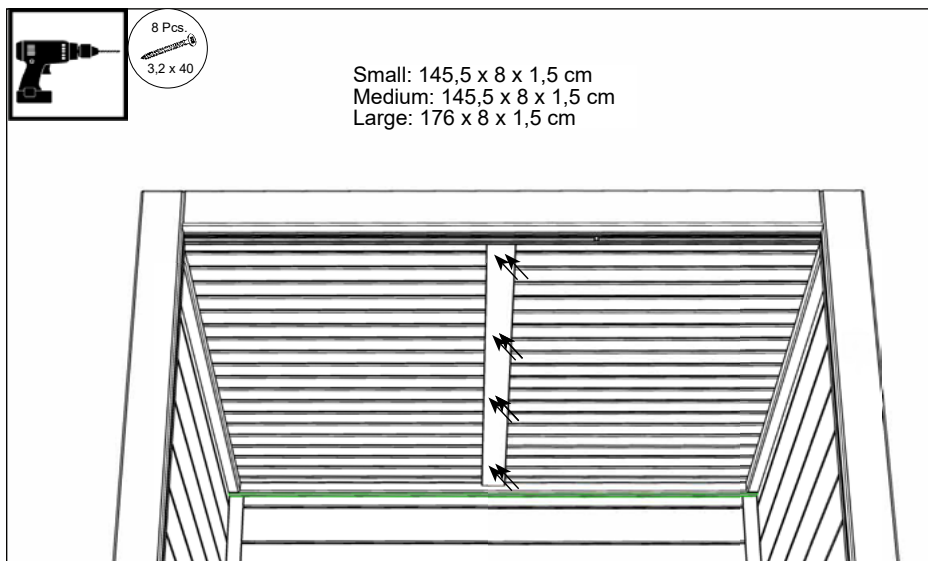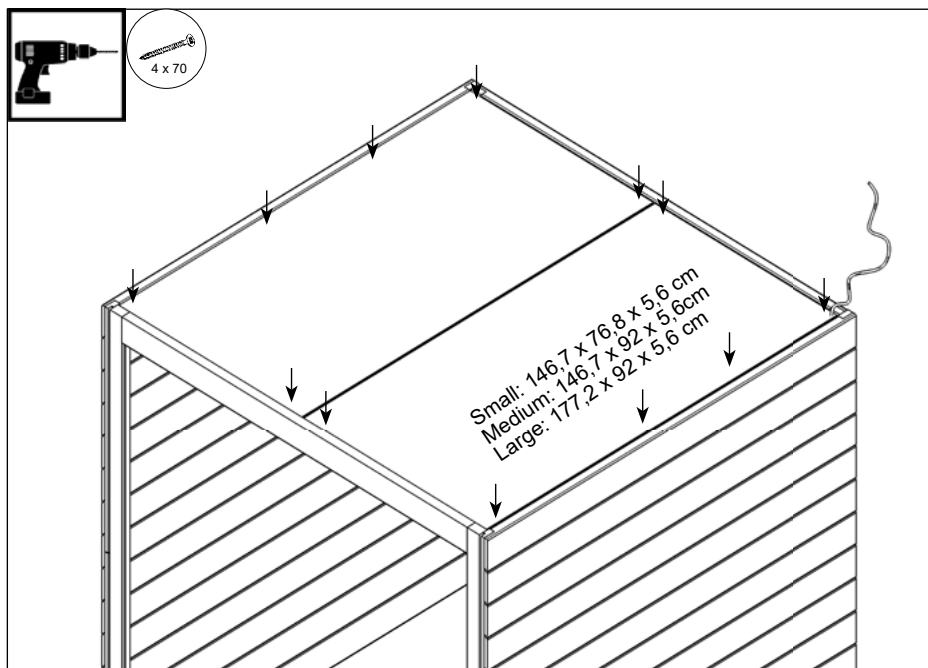




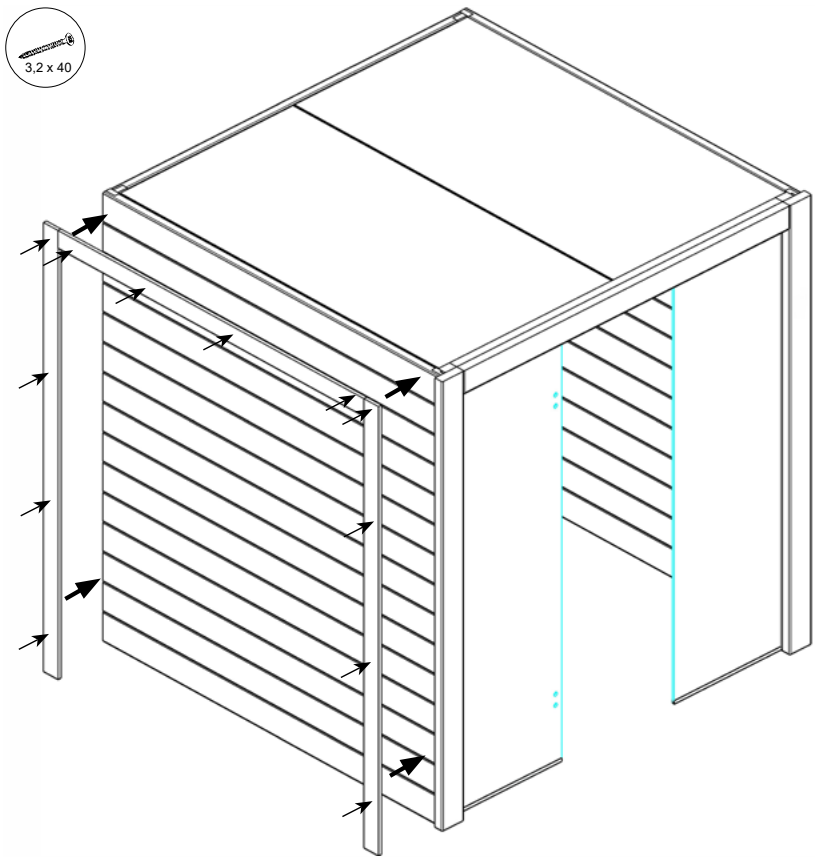





8.5.

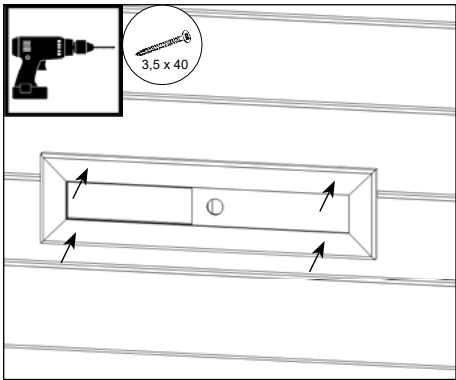

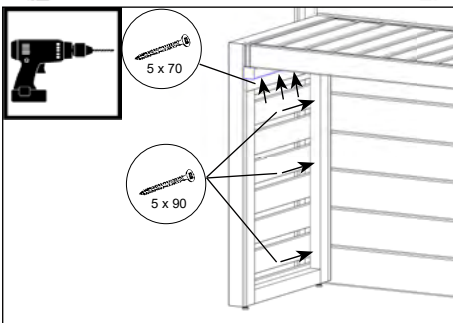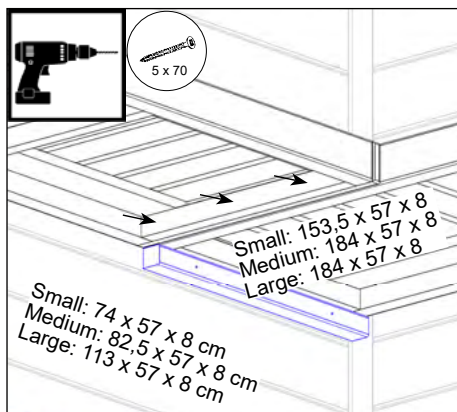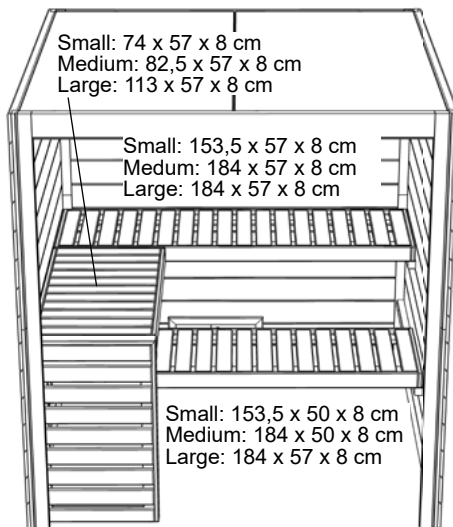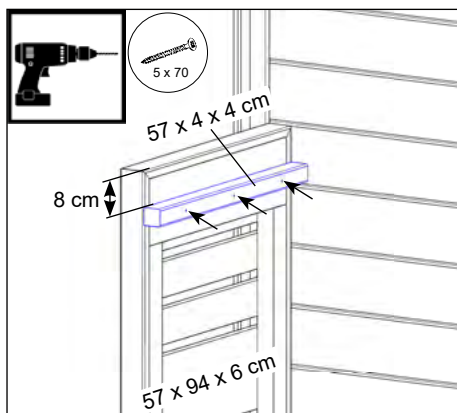
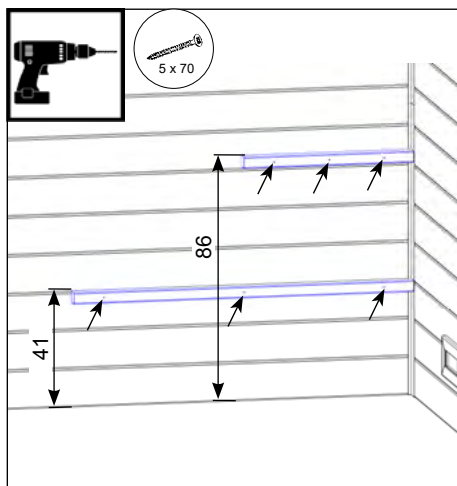
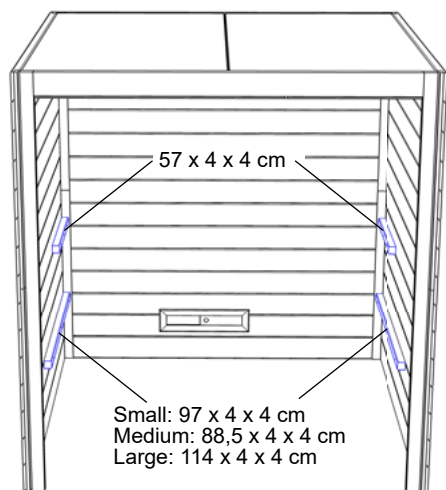


8.6.

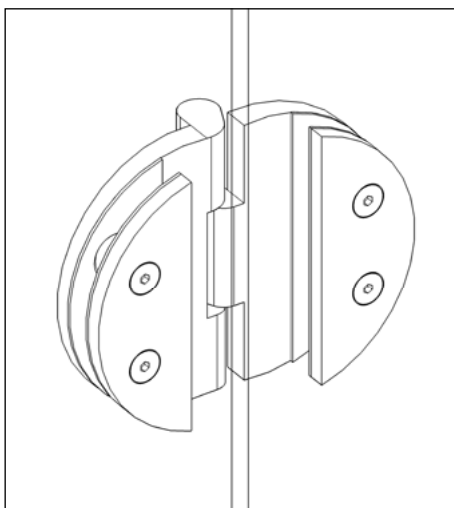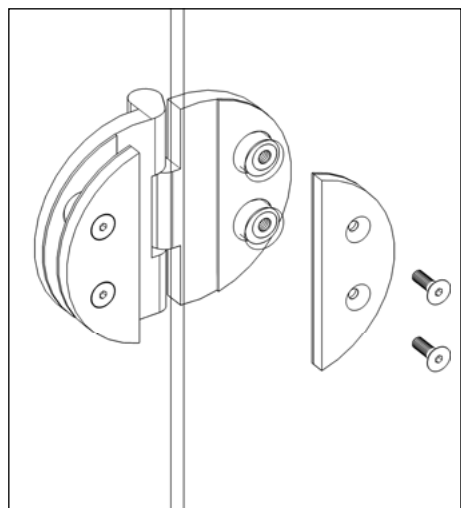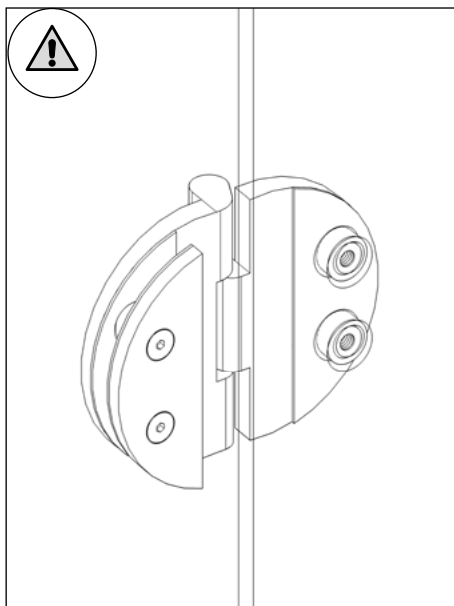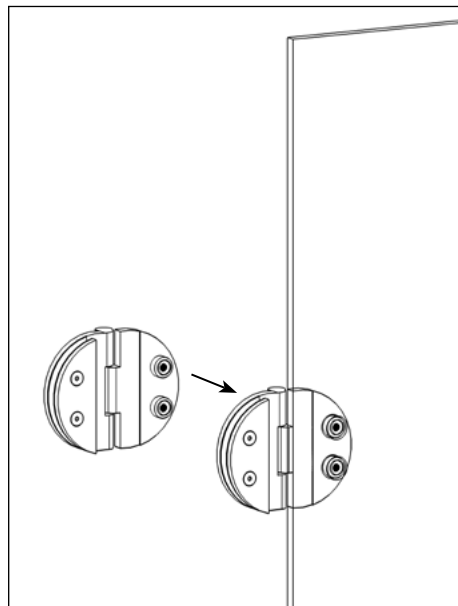


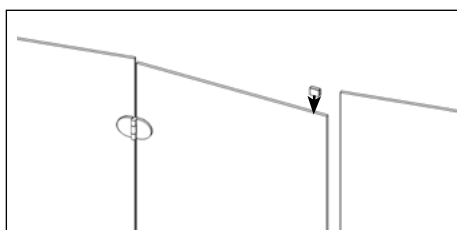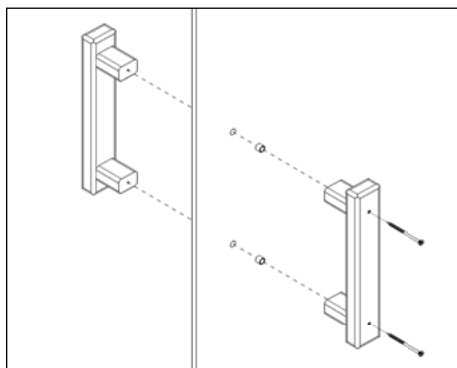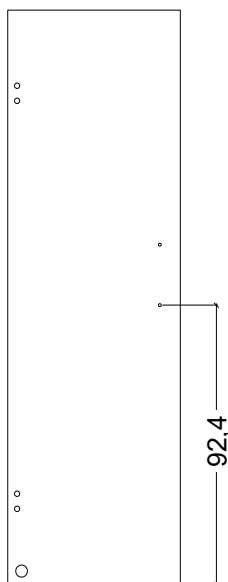


Domo Small

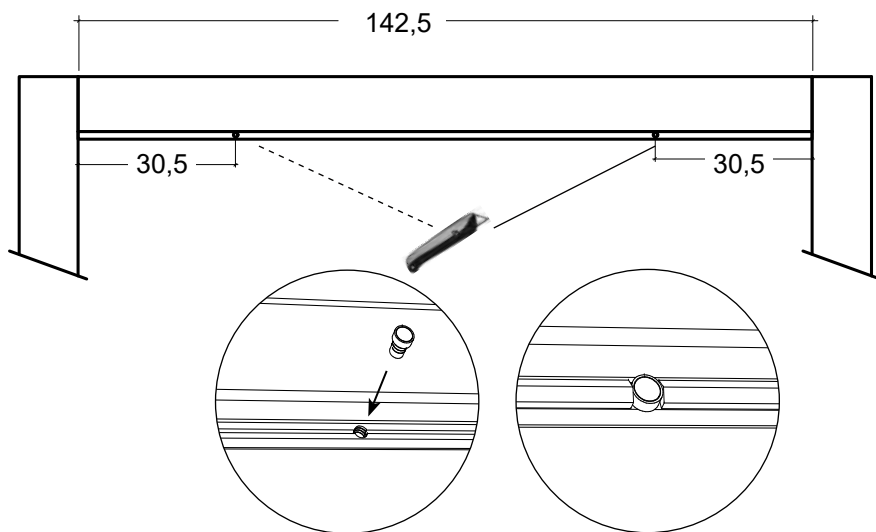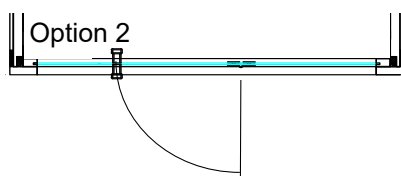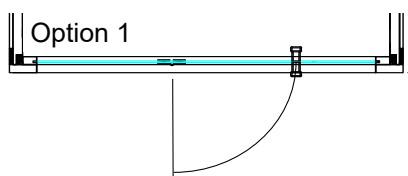


Domo Medium / Domo Large

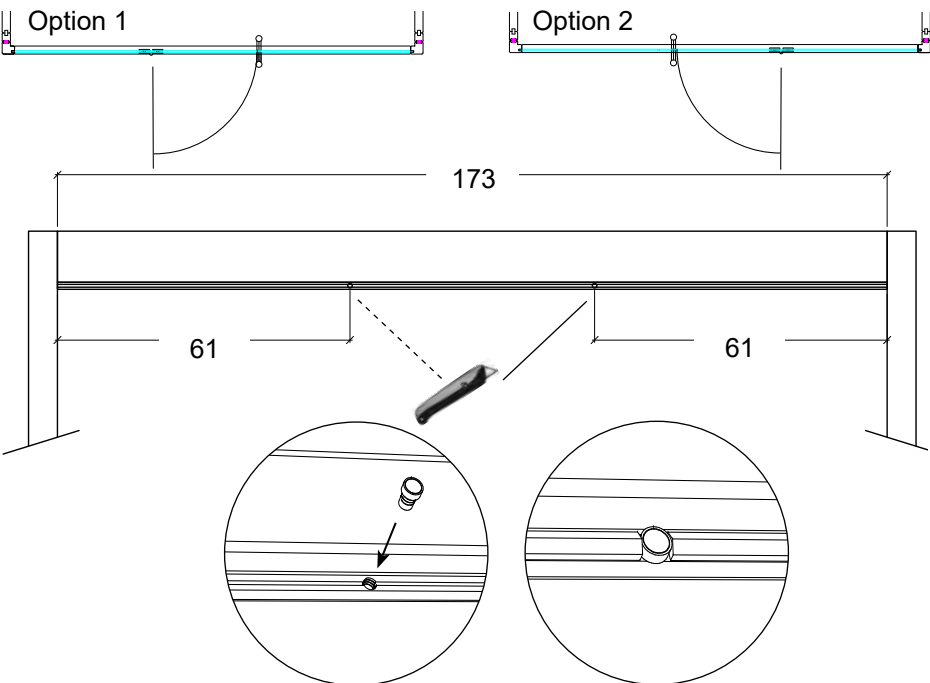

8.7.

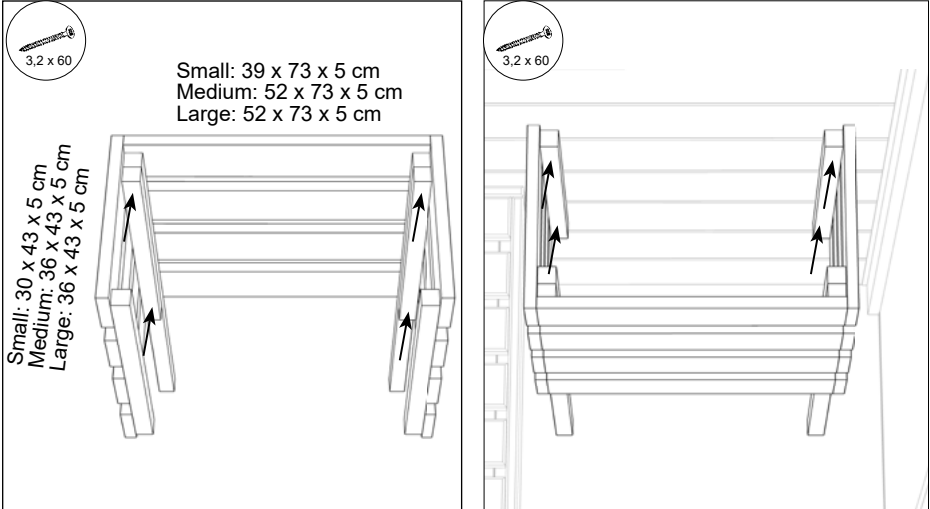

8.8.

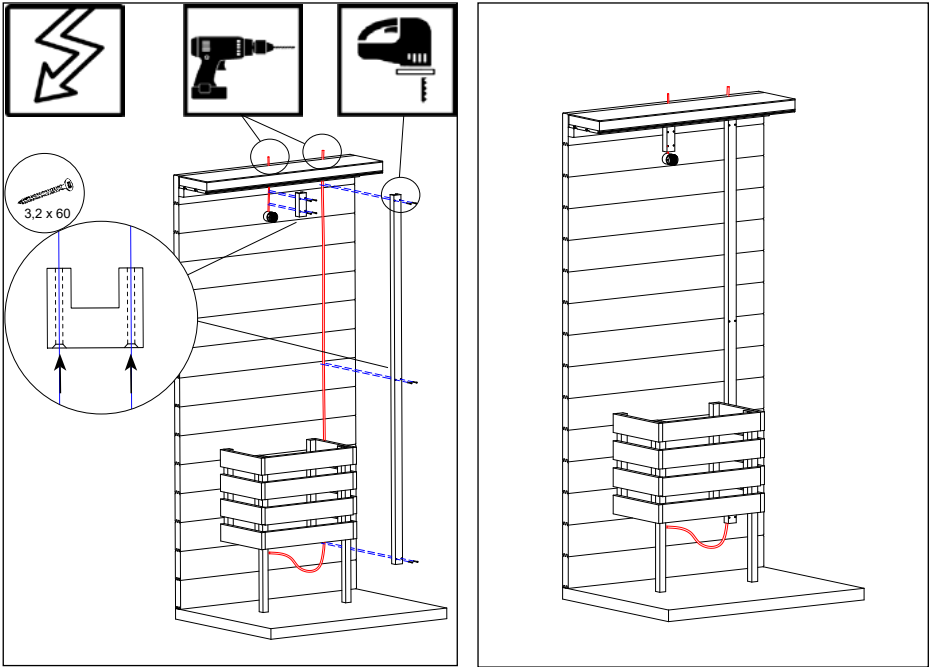

Let's sauna.



@ harviaglobal

GLOBAL

Harvia Finland
Teollisuustie 1-7
40951 Muurame
FINLAND
T +358 207 464 000
harvia@harvia.com

CENTRAL EUROPE

Harvia Austria GmbH
Wartenburger Straße 31
4840 Vöcklabruck
AUSTRIA
T +43 (0) 7672 22 900-50
info@harvia.com